



INSTALLATION INSTRUCTIONS

Accessory

**HONDA MUSICLINK™
(FOR i-Pod®)**

Application

**2007 ELEMENT
(EX, SC)**

Publications No.

All 33126-34080


Issue Date

NOV 2006


PARTS LIST

**Attachment Kit (sold separately)
P/N 08A28-1H1-800**

4 Cushion tapes

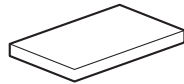


Holder cushion

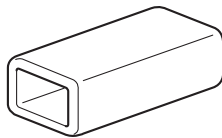


Grommet



8 Wire ties

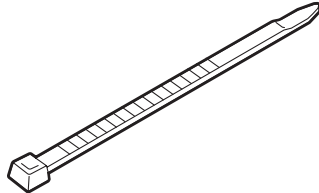


2 Long wire ties

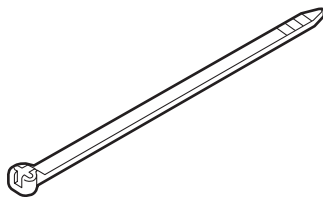


**MusicLink Adapter Kit (sold separately)
P/N 08A28-1H1-100**


Music Link adapter unit

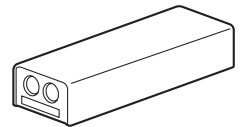


Bus cable

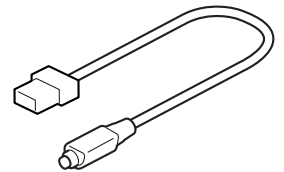


MusicLink harness

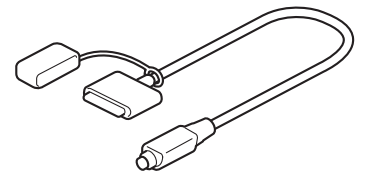

CD-ROM
(For home computer use only)

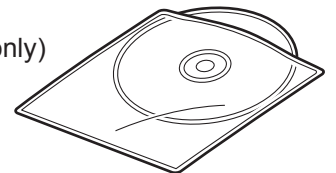


Quick reference guide

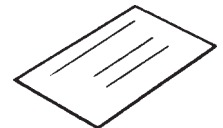

**BUS Cable 2 Port (sold separately)
P/N 08A31-0F1-000**


BUS cable 2 port

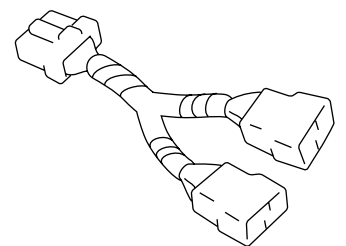

TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Flat-tip screwdriver
Diagonal cutters
Scissors
Ratchet
10 mm Socket
10 mm Combination wrenches
Drill
Drill bit (3 mm)
19 mm Hole saw (3/4")
Shop towel
Utility knife
Electrical tape
Pushpin
Eye protection
Isopropyl alcohol
Felt-tip pen
Masking tape

Illustration of the MusicLink System Installed on the vehicle

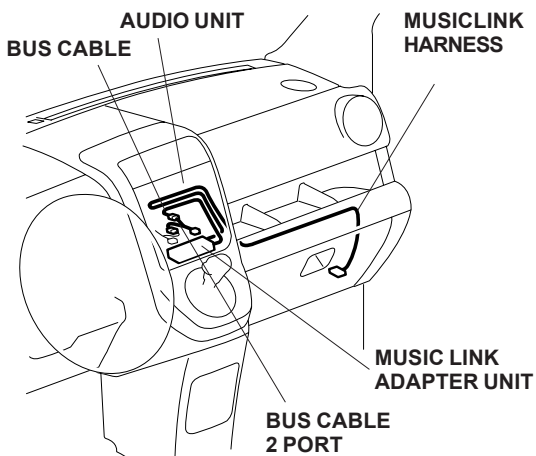


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.

3. Attach pieces of masking tape to the audio panel to the areas shown. Pull the masking tape just attached to release the audio panel (five clips).
 - Take care not to damage the clips.

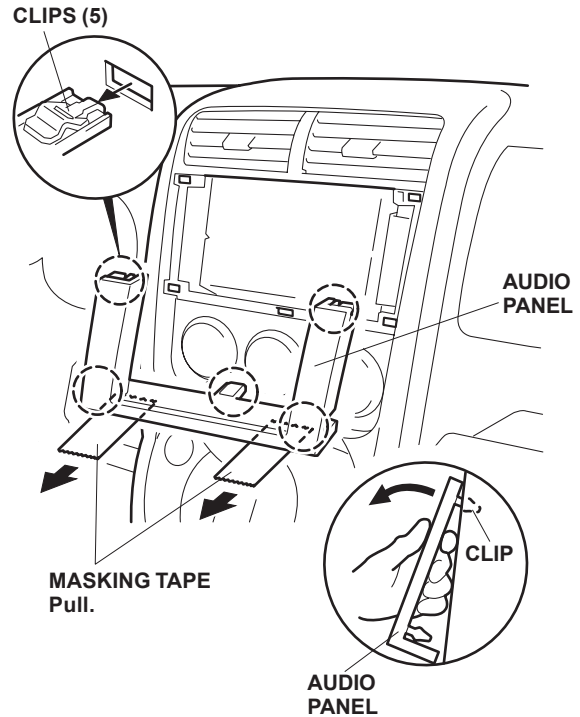


6515010K

4. Remove the four washer-screws and pull out the audio unit.

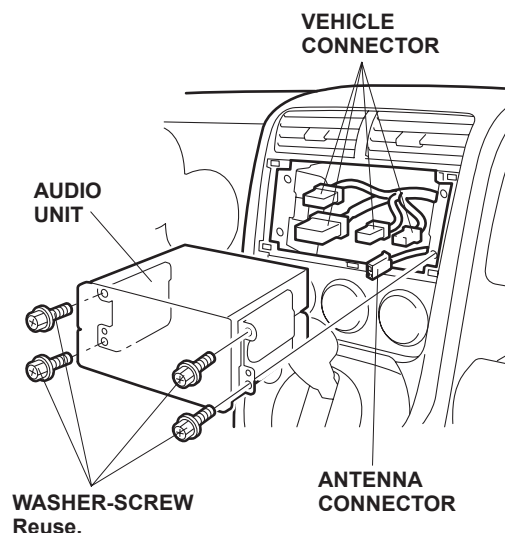


5. Disconnect the four vehicle connectors and the antenna connector, then remove the audio unit.


6. Remove the center panel (releasing the ten clips and unplug the vehicle connectors).
 - On M/T model: Slide the top of the shift boot down away from the shift knob, then remove the shift knob by turning it counterclockwise.

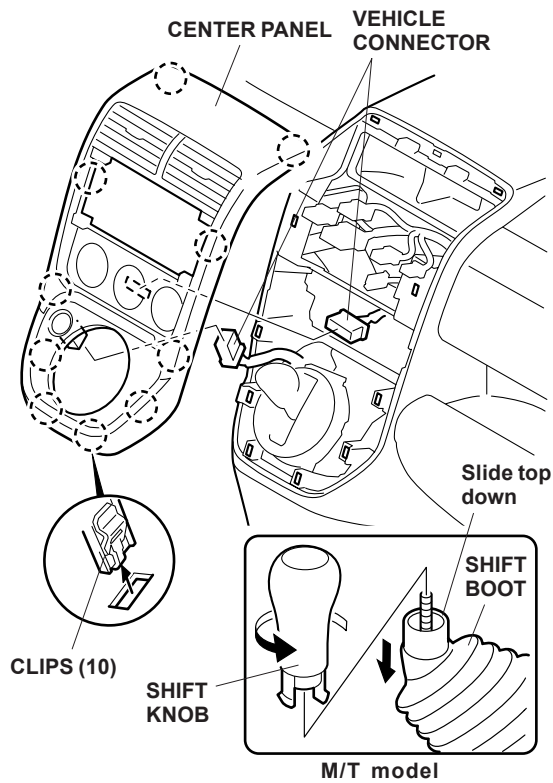


7. Remove the passenger's lower dashboard cover (disengage the three clips, and disconnect the two pins).

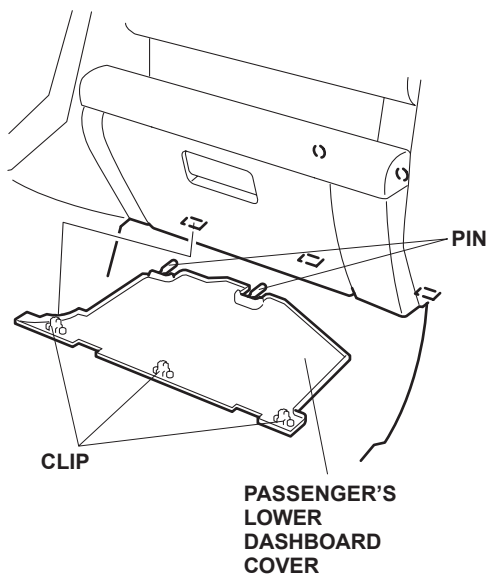


8. Open the glove box and remove the two stoppers by releasing the two retaining tabs for each stopper. Remove the two screws that fasten the glove box, and remove the glove box.

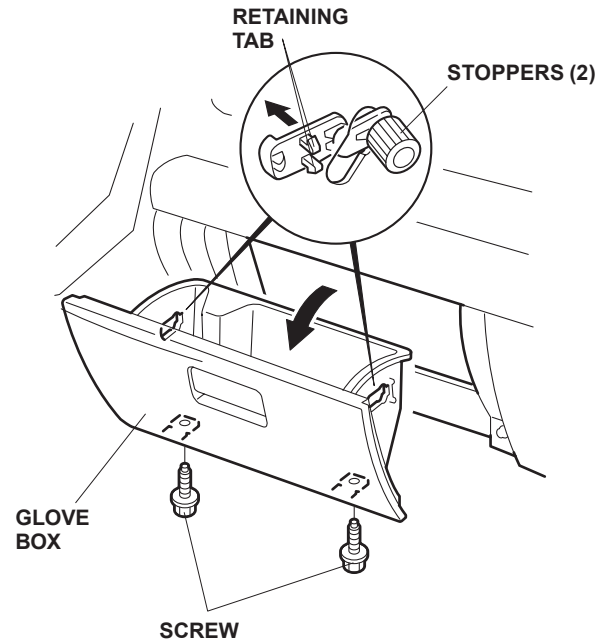


9. At the center panel opening, route the bus cable as shown.

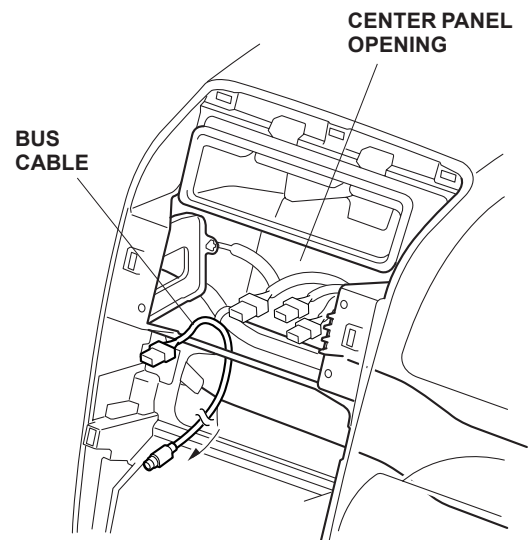

10. Using a felt-tip pen, mark the MusicLink harness at the measurement shown.

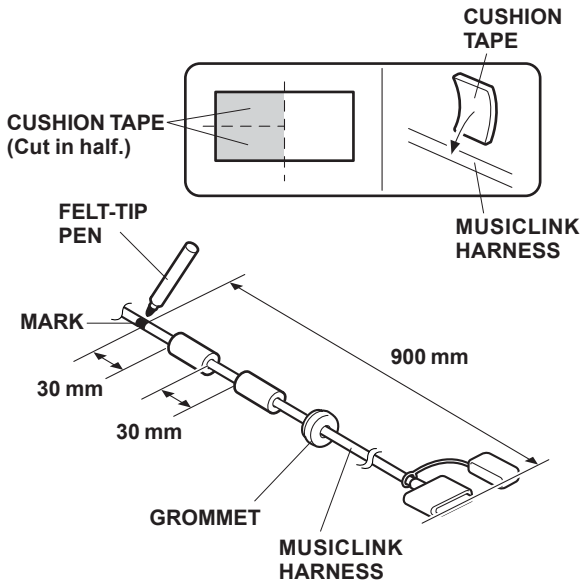


11. Install the grommet through the MusicLink harness.
12. Using scissors cut one cushion tape into 3 equal pieces, wrap the two cushion tapes to the MusicLink harness at the measured locations.
13. Using a utility knife cut the rib of the glove box at the measurement. After cutting the rib, thoroughly remove any burrs.

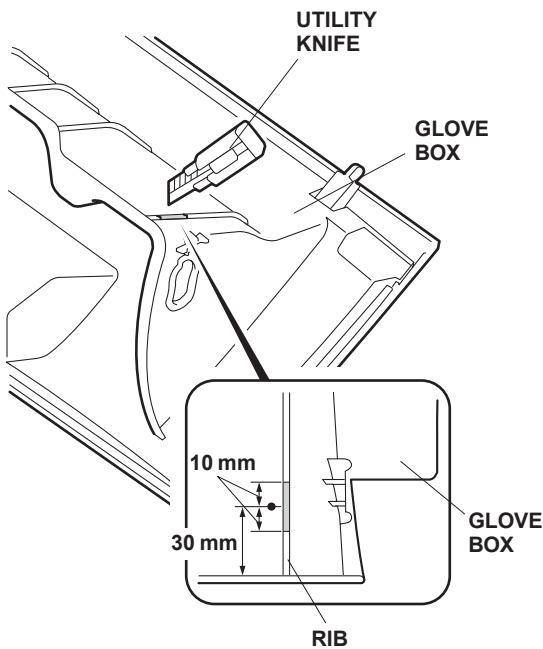


14. While wearing eye protection, drill a 19 mm (3/4") hole through the marked location. Remove any burrs from the drilled hole.

•First drill with a 3 mm drill bit, then finish with a 19 mm hole saw.


NOTE: To prevent damage, wrap electrical tape around the drill bit at a point about 30 mm away from the tip.

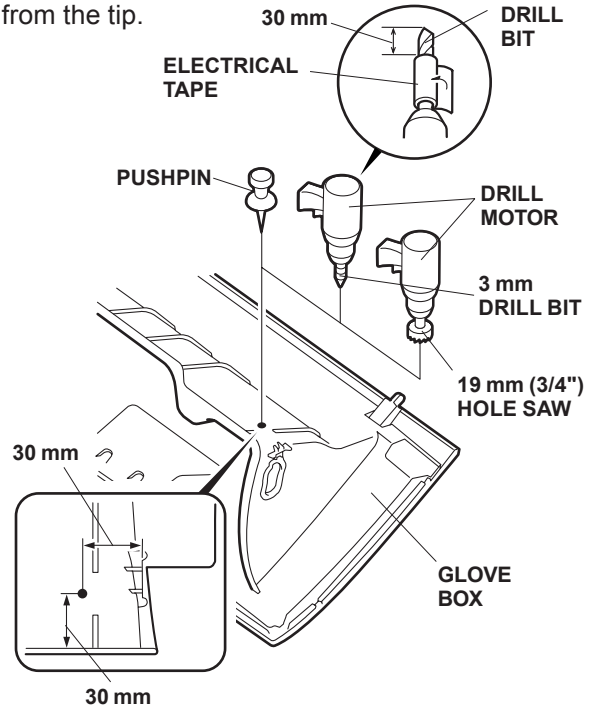


15. Route the MusicLink harness DIN connector into the 19 mm hole in the direction shown, and install the grommet to the 19 mm hole.

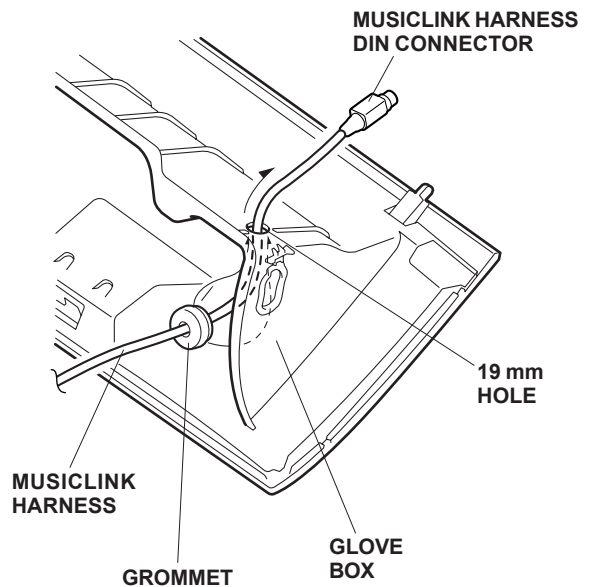


16. Using isopropyl alcohol clean the vehicle pipe where the cushion tape will attach. Attach a cushion tape cut in step 10 to the vehicle pipe as shown.

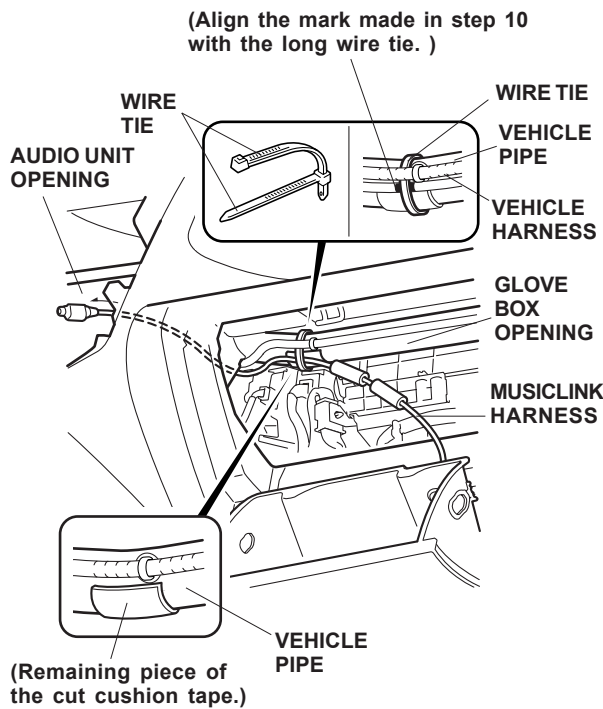

17. Route the MusicLink harness to the glove box opening to the audio unit opening.
18. Secure the MusicLink harness to the vehicle pipe (over the tape) with the two wire ties.
19. Using isopropyl alcohol clean the vehicle pipe with isopropyl alcohol where the cushion tape will attach. Attach a cushion tape to the vehicle pipe.

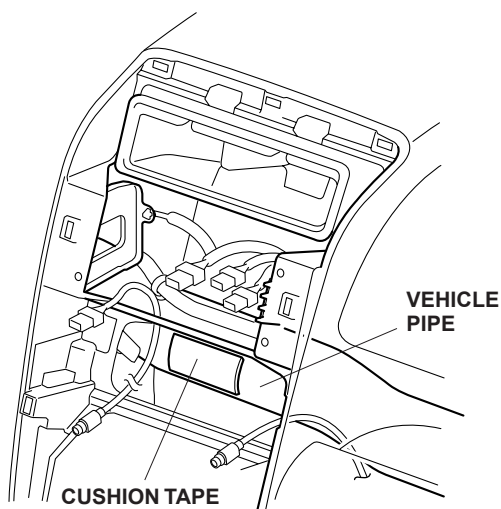


20. Insert the MusicLink adapter unit into the holder cushion.

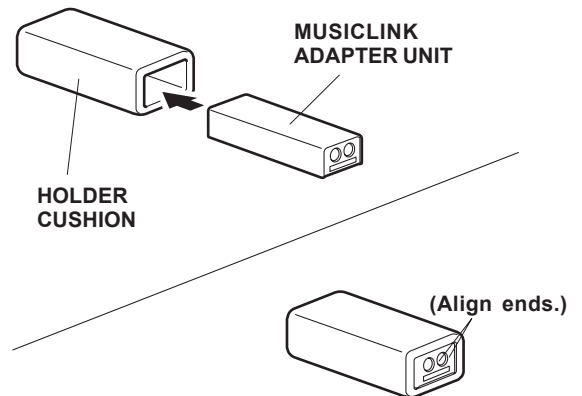


21. Route the MusicLink harness and the bus cable through the audio unit opening and connect the MusicLink harness DIN connector (White) and the bus cable DIN connector (Black) to the MusicLink adapter assembly. Note the location of the connectors and the terminals.

- The MusicLink harness DIN connector (White) and the bus cable DIN connector (Black) are identical in form and size. Plug them to the proper position shown.
- Not to damage the connectors, plug The MusicLink harness DIN connector (White) and the bus cable DIN connector (Black) in aligning their lock with their corresponding points of the Honda MusicLink unit.

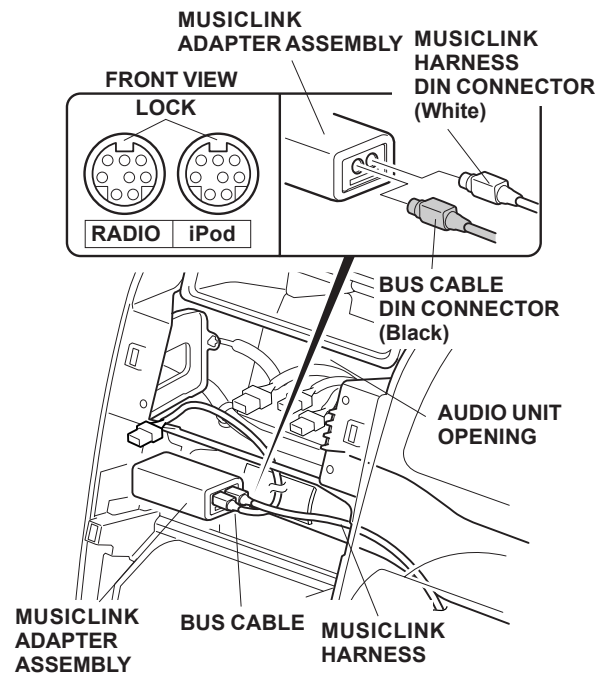


- Secure the MusicLink adapter assembly to the vehicle pipe with the two long wire ties.

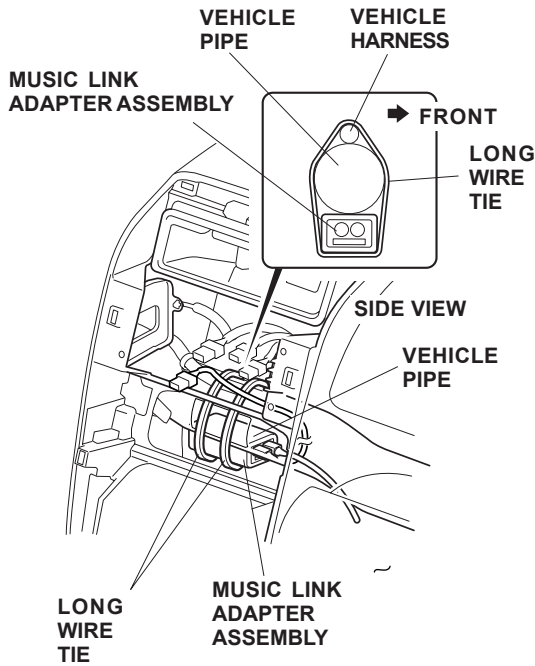

- Secure the bus cable


Without XM Satellite Radio or CD Changer

- Align the bus cable 2 port 14-pin connector with the vehicle 20-pin connector. Bundle up the excess of the bus cable and the MusicLink harness, and secure the bus cable and the MusicLink harness to the vehicle harness with the two wire ties.

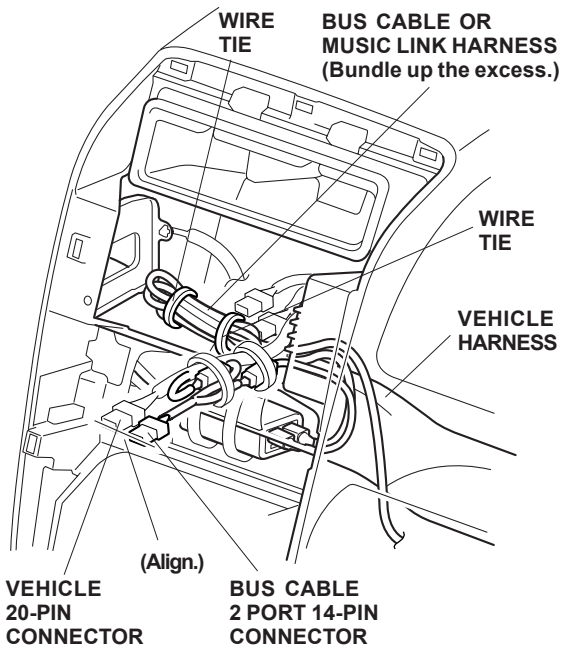



With XM Satellite Radio or CD Changer

- Plug the bus cable 14-pin connector and the vehicle 14-pin connector (for XM radio) or the CD changer bus cable 14-pin connector into the bus cable 2 port 14-pin connectors.
- Attach one cushion tape around each of the bus cable 2 port 14-pin connectors.

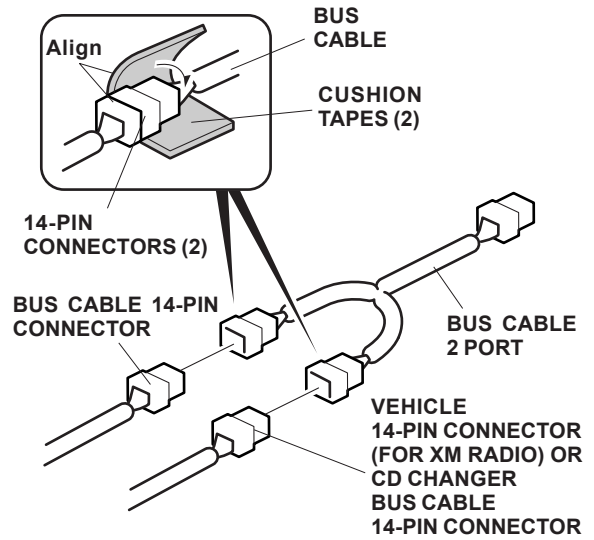


- Bundle up the vehicle harness or the CD changer bus cable, and secure them, the bus cable and the bus cable 2 port with the two wire ties.

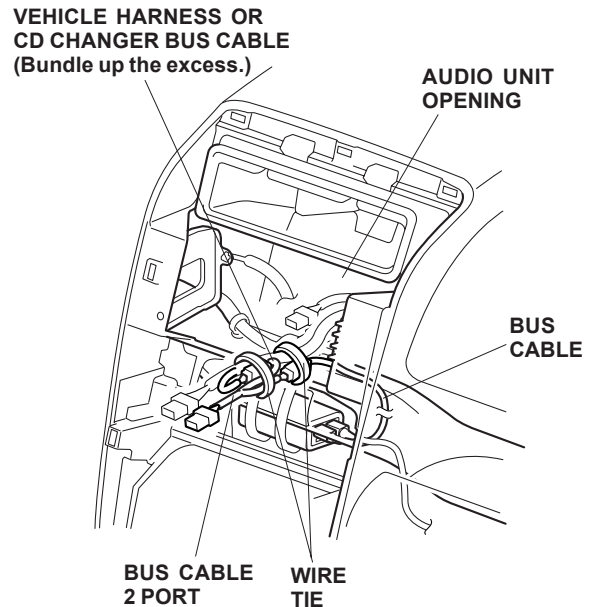

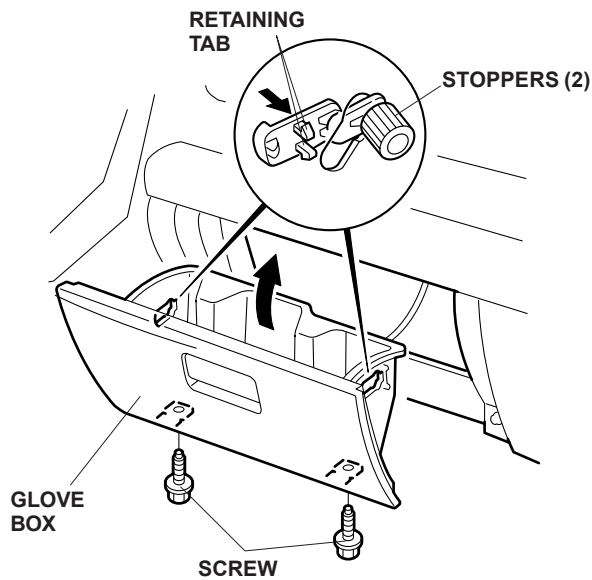

24. Reinstall the glove box.

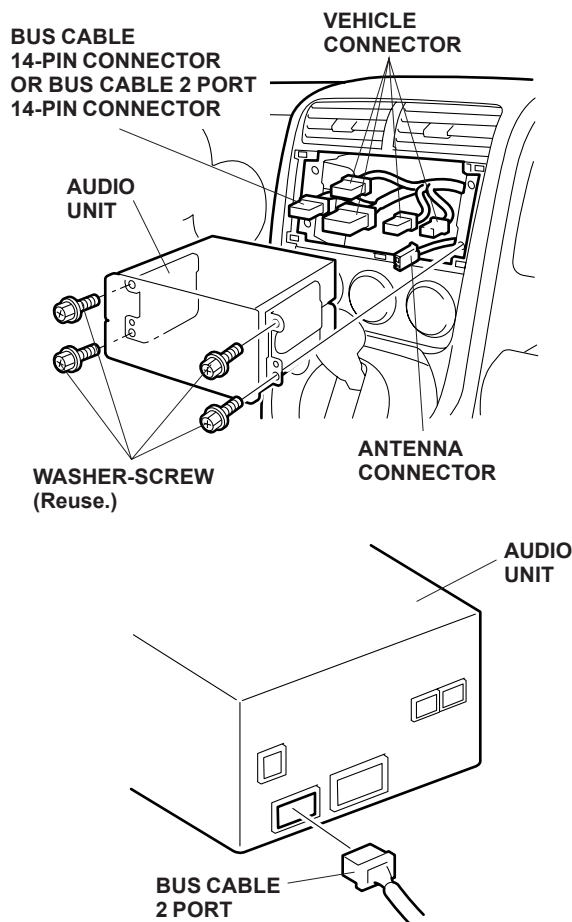

25. Connect the vehicle connectors and the bus 14-pin connector (or bus cable 2 port 14-pin connector) to the audio unit, and reinstall the audio unit.
 26. Check that all wire harnesses are routed properly and all connectors are plugged in.
 27. Reconnect the negative cable to the battery.
 28. Enter the customer's radio anti-theft code, and reset the radio station presets and the clock.
 29. Reinstall all removed parts.
 30. Turn the audio unit to ON. Check that "CD EJECT" is shown on the display while in the CD changer mode (the Music Link should be recognized as CD changer 4).
- NOTE: When the battery is disconnected, the driver's window AUTO function is disable.
31. Start the engine. Push down on the driver's window switch until the window is fully open.
 32. Pull up on the driver's window switch fully to close the window completely, then hold the switch for 2 seconds or more.
 33. Test the window AUTO function.